




LOWE HARDWARE


LOCKSET AND SPINDLE ALIGNMENT INSTRUCTIONS

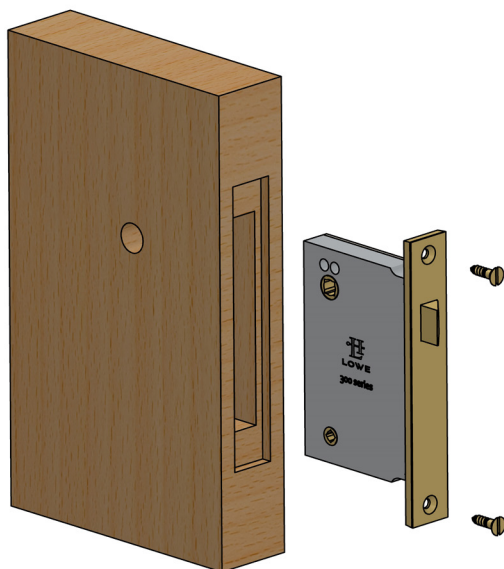

STEP 1: Install Lockset into the door that has been mortised according to the lock template.

NOTE: The Lock faceplate can be rotated to conform to doors with beveled edges by loosening the top and bottom faceplate adjustment screws found behind the faceplate.

TOP FACEPLATE
ADJUSTMENT SCREW


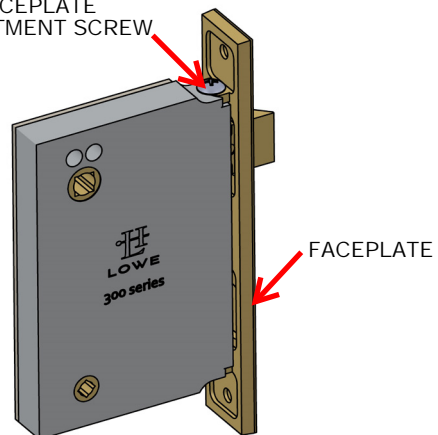




LOWE HARDWARE

LOCKSET AND SPINDLE ALIGNMENT INSTRUCTIONS

STEP 2: Insert the 5097 spindle into the lock spindle hub. Slide a subrose onto the spindle from each side of the door. Thread the 5097 alignment nuts onto each side with the tapered side facing the door. Tighten the alignment nuts while watching to ensure that the nuts engage and center on the subroses and the spindle remains perpendicular to the door.

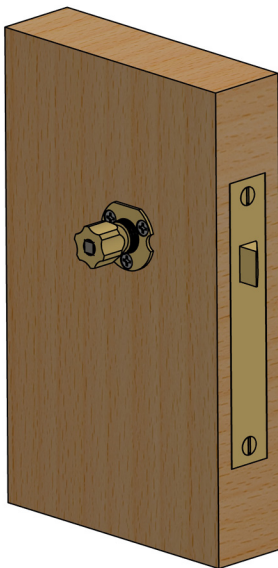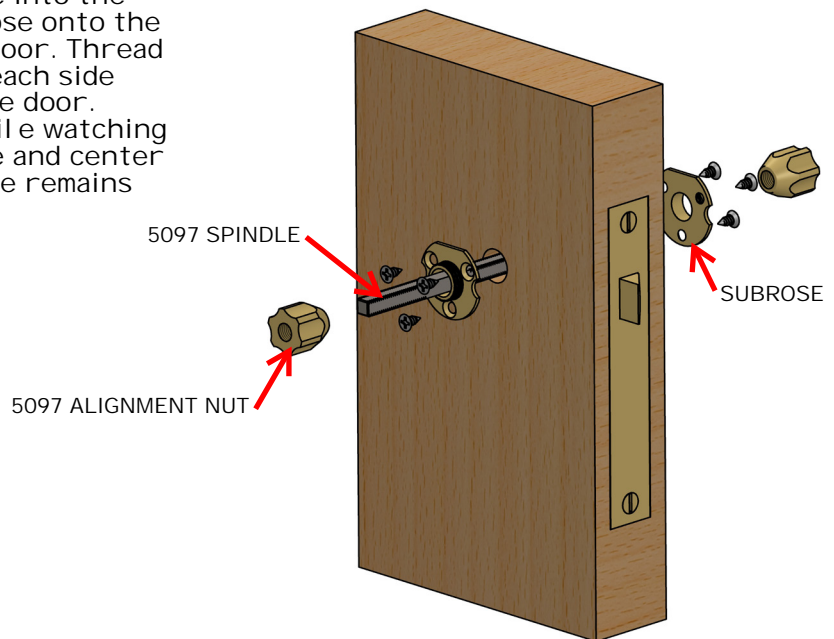

STEP 3: Drill pilot holes for the six #8 subrose mounting screws. Install the subrose mounting screws and remove the 5097 alignment tool.